


Conexión Hembra Giratoria JIC 45°

JIC 45° Cono 37°

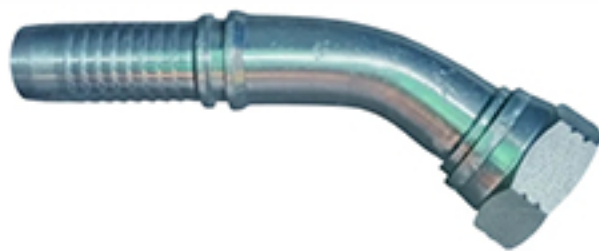

REFERENCIA: NJ45T

CÓDIGO	REFERENCIA	MEDIDAS	ROSCA-E	A	C	H	S2
PNJ45T 04-04	NJ45T 04-04	1/4" X 1/4"	7/16"X20	40.2	9	17.2	15
PNJ45T 04-05	NJ45T 04-05	1/4" X 5/16"	1/2"X20	40.5	9.5	18	17
PNJ45T 04-06	NJ45T 04-06	1/4" X 3/8"	9/16"X18	40.5	10.5	18.5	19
PNJ45T 06-06	NJ45T 06-06	3/8" X 3/8"	9/16"X18	44.3	10.5	20	19
PNJ45T 06-08	NJ45T 06-08	3/8" X 1/2"	3/4"X16	45.7	11	21.4	24
PNJ45T 06-10	NJ45T 06-10	3/8" X 5/8"	3/4"X16	56	11	51.5	24
PNJ45T 08-08	NJ45T 08-08	1/2" X 1/2"	3/4"X16	58.6	11	23.5	24
PNJ45T 08-10	NJ45T 08-10	1/2" X 5/8"	7/8"X14	58.9	13	24	27
PNJ45T 10-10	NJ45T 10-10	5/8" X 5/8"	7/8"X14	70.1	13	25.3	27
PNJ45T 10-12	NJ45T 10-12	5/8" X 3/4"	1.1/16"X12	71.2	15	26.4	32
PNJ45T 12-12	NJ45T 12-12	3/4" X 3/4"	1.1/16"X12	77.4	15	30	32
PNJ45T 12-16	NJ45T 12-16	3/4" X 1"	1.5/16"X12	77.4	16	30	41

E - Rosca

A - Longitud total desde el centro de la tuerca hasta el final de la espiga

C - Longitud de la espiga (la parte que entra la manguera)

H - Altura total desde la base de la tuerca hasta la parte superior del codo

S2 - El tamaño de la llave (en mm) que necesitas para apretar la tuerca